

WELCOME

Thank you for purchasing this DeltaLab Digital Metronome. Please read this manual carefully to get the most out of it. Keep this manual for future reference.



INSTALLING BATTERY

1. Turn the DMT-1 over.
2. Remove battery cover by pressing on the thumb grip and sliding the cover off.
3. Follow polarity guidelines when installing batteries.
4. If the tuner malfunctions when new batteries are installed and you cannot correct the problem by turning the power off and then on again, remove and reinstall the batteries.

WARRANTY

One (1) Year Limited Warranty and Remedies

Subject to the limitations below, DeltaLab® warrants to the original owner that the components of this product are free from defects in workmanship and materials, subject to normal use and service, for one (1) year from the date of purchase. DELTALAB® MAKES NO OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR ANY IMPLIED WARRANTY ARISING OUT OF A COURSE OF DEALING, CUSTOM OR USAGE OF TRADE. User is responsible for determining whether this product is fit for a particular purpose and suitable for user's application. If the product is defective within the warranty period, user's exclusive remedy and manufacturer's sole obligation will be, at its option, to replace the product or refund the purchase price. Except where prohibited by law, manufacturer and seller will not be liable for any loss or damage

arising from the product, whether direct, indirect, special, incidental or consequential, regardless of the legal theory asserted, including warranty, contract, negligence or strict liability.

California Prop 65 warning: This product may contain a chemical(s) known to the state of California to cause cancer or birth defects or other reproductive harm.

DeltaLab, P.O. Box 5111,
Thousand Oaks, CA 91359-5111

All trademarks and registered trademarks mentioned herein are recognized as the property of their respective holders.

Made in China

1009-9469

PRECAUTIONS/SAFETY

Environmental conditions

Using the tuner in these conditions may result in tuner malfunction:

- Direct Sunlight
- Extreme temperature or humidity
- Extreme dust or dirt
- Excessive vibration
- Proximity to magnetic fields

Battery

Turn the power switch off when not in use to preserve battery life. Remove battery during extended periods of non-use to prevent battery leakage into the unit.

Interference

Operate this device at a suitable distance from televisions and radios to prevent interference.

Handling

Do not apply excessive force to buttons or switches on this device. Use of excessive force may cause the device to malfunction.

Care

Do not use cleaning chemicals or cleaning liquids on the surface of this device. Chemicals may cause damage to the finish or display screen. If cleaning is required, use a soft, dry cloth to wipe the surface.

Foreign Matter

Avoid using this device in close proximity to liquids. Liquids entering the device may cause malfunction, electrical shock or fire. Metal objects or particles can also cause malfunction, electrical shock or fire.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This Class B digital apparatus complies with Canadian ICES-003 CET.





www.deltalabeffects.com
U.S.A.
Thousand Oaks, CA 91359-5111
P.O. Box 5111



METRONOME DMT-1 OWNER'S MANUAL



OPERATION GUIDE

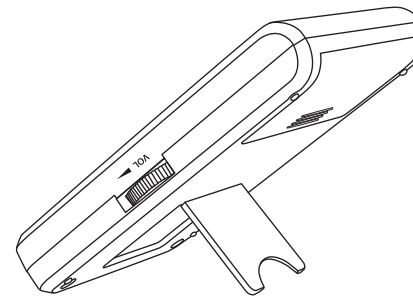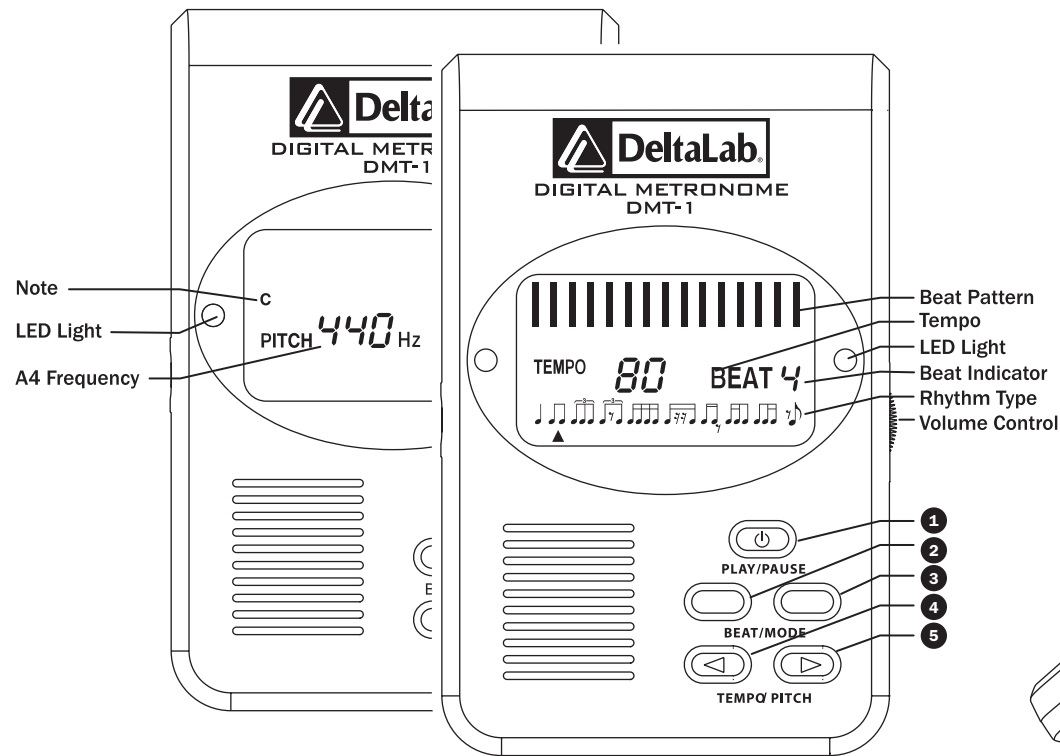

Tilt Stand - Provides a tilt-up angle for easy display reading.

Function	Operation
1. Power	Press and hold 1 for two seconds to turn ON/OFF.
2. Mode Selection	Press and hold 3 to choose between Metronome and Tone Generator modes.
3. Metronome Mode	Once in Metronome mode, press 1 to start. Press 2 to change rhythm style, or 3 to adjust beats per measure. Buttons 4 / 5 adjust tempo speed from 30-260. Press 1 again to pause.
4. Tone Generator Mode	Once in Tone Generator mode, press 1 to start. Use 2 / 3 to change notes, or 4 / 5 to calibrate pitch. Press 1 again to pause.

TROUBLESHOOTING

If the Metronome begins behaving unusually, turn the power off, remove batteries, then put them back in and turn the power back on.

If the display fades, please replace the batteries with new ones.

ACCESSORIES INCLUDED

- 2 AAA Batteries
- Owner's Manual

SPECIFICATIONS

Tempo:

30 - 360 bpm

Beat:

0, 1, 2, 3, 4, 5, 6, 7, 8, 9

Value:



A4:

430-450Hz

Chromatic Sound Groups:

C C[#] D D[#] E F F[#] G G[#] A A[#] B

Battery:

3V (2 × AAA batteries)

Size:

94 mm × 60 mm × 15 mm

3.7" x 2.7" x .6"

Weight:

< 100 grams

< 3.5 oz